May 2018
901043-001
Rev 00

TouchTunes

FRU Installation Guide
Replacing Angelina's Wall Bracket

Purpose

This document explains how to replace the wall bracket using the Wall Bracket Field Replacement Unit (FRU) kit (P/N 600260-001) on an Angelina jukebox.

Audience

- TouchTunes Angelina jukebox operators
- TouchTunes Field Service and Customer Support

Estimated Time

15 minutes

Required Personnel

1 technician, 1 assistant

This document includes tasks of the following type:

☐	Software
☑	Hardware
☐	Mechanical
☐	Packaging

Topics

- Required Tools and Equipment
- Important Safety Information
- Included in This Kit
- Replacing the Wall Bracket
- Contacting Technical Support

Required Tools and Equipment

- Phillips #2 screwdriver

Important Safety Information

WARNING: When performing this procedure or any other maintenance on your jukebox, the unit must be powered off and its electrical power disconnected.

CAUTION: The Angelina jukebox represents a serious safety hazard if its mounting system should fail. Installation of the mounting system should be performed only by an experienced installer or licensed contractor who is familiar with standard rigging, mounting and hanging practices as recognized by a licensed engineer or government agency in your area.

Included in This Kit

Ensure that you have received all the required parts before proceeding with this installation.

Part	Quantity	TouchTunes Part #
ASY, WALL BRACKET	1	401606-001
MAN, FRU, WALL BRACKET (this document)	1	901043-001

Replacing the Wall Bracket

1. Unlock and open the Angelina jukebox.
2. Press the **MNGR** button on the I/O Board to open the Operator interface main menu.
3. On the Angelina screen, press the **REBOOT** button.
4. When you hear the BIOS beep, power down Angelina by setting the rocker switch on the Power Supply Unit (PSU) inside the jukebox to the OFF (**O**) position. Remove the power cable from the wall socket.

WARNING: Never shut down or unplug Angelina without first performing a reboot and waiting for the BIOS beep. Doing so can cause damage to the hard drive and make it unusable.

5. Remove all external connections, which can be:
   - Wired remote
   - External audio (Zones 1, 2, 3, aux, and mic)
   - Network
   - Speakers

6. Set the 2 pivot latches that hold the jukebox fastened to the existing wall bracket to the horizontal (unlocked) position. The location of the pivot latches is circled in red in the following figure.

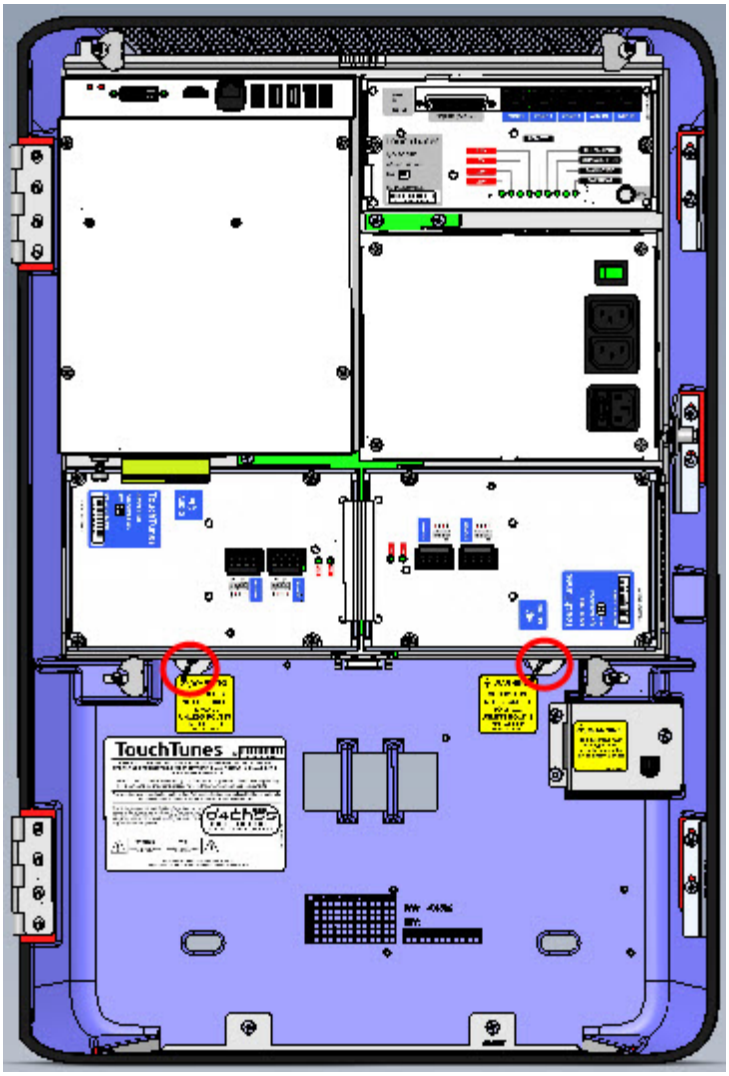

Figure 1: Angelina payment model - Inside view - Wall bracket pivot latch locations

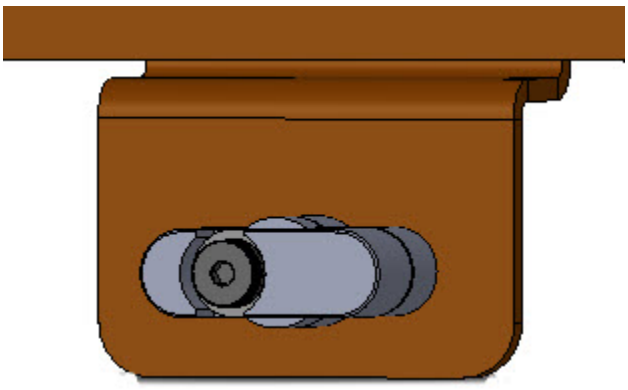

Figure 2: Pivot latch in horizontal position

CAUTION: The Angelina jukebox can cause injury if lifted incorrectly or by a single individual. TouchTunes strongly recommens that **two** people be responsible for moving the jukebox at all times.

7. Remove Angelina from the wall and place the jukebox face up on a clean, flat surface such as a table or workbench.
8. Remove the existing wall bracket from the wall.
9. Ensure that the screw upon which the previous wall bracket was resting is 62 inches from the floor. If not, perform the necessary adjustment.
10. With enough of the screw protruding from the wall, hang the central part of the wall bracket onto the screw using the center hole on the bracket.
11. Using the spirit level located on the top of the bracket, ensure that the bracket is level, then fasten it to the wall using screws and washers according to your local regulations ensuring that the wall bracket will be able to support Angelina's weight. See the following **example** configuration.

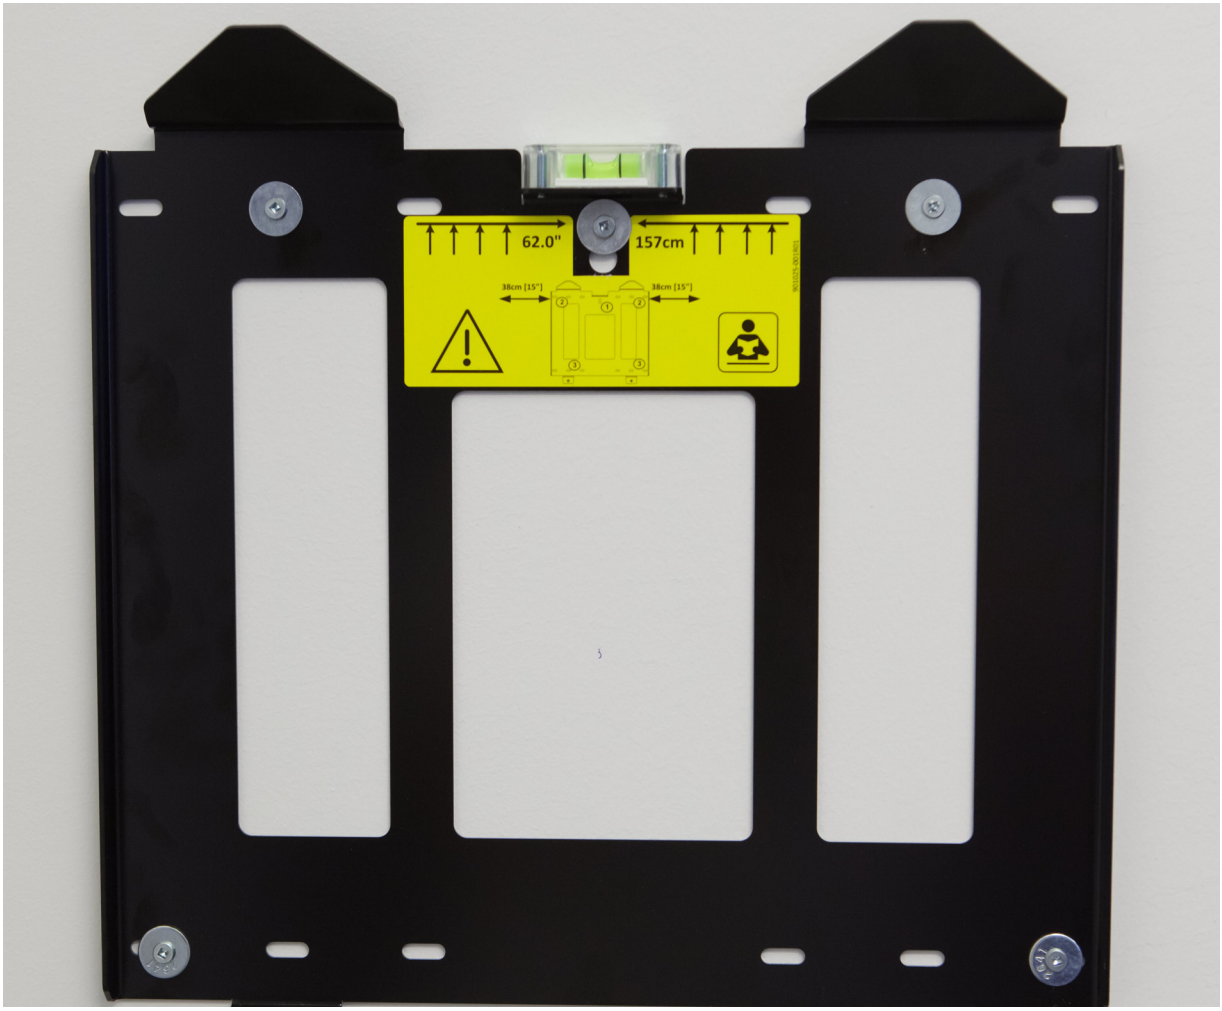

Figure 3: Wall bracket installed

12. Identify the receptacles on the rear of the Angelina jukebox. The receptacles fit onto flange hooks on the wall bracket, securing the Angelina jukebox to the wall.

13. Make sure that the 2 pivot latches located at the bottom of the new wall bracket are in the horizontal (unlocked) position.
14. Using at least two people, lift the Angelina jukebox so that the top of unit is slightly higher than the top of the wall bracket.
15. Align the receptacles (highlighted in red below) on Angelina with the flange hooks on the wall bracket ensuring that the pivot latches on the bottom of the wall bracket also align with the corresponding openings (highlighted in green below) on the back of the jukebox.

Figure 4: Rear of jukebox

16. Hang the Angelina jukebox on the wall bracket allowing the weight of the unit to set it into position.
17. Unlock Angelina from the lock on the right side of the unit and then slowly swing open the Angelina case. Take care when the door is open as it is heavy and can pull down the jukebox until it has been secured to the wall in the next step.
18. Turn the wall bracket pivot latches to the vertical (locked) position to completely secure the Angelina jukebox to the wall bracket (see Figure 1: Angelina payment model - Inside view - Wall bracket pivot latch locations).

CAUTION: Angelina is **not** secure until the wall bracket pivot latches are set to the vertical (locked) position.

19. Attach the AC, speakers, and network cables removed at the beginning of this procedure.
20. Power Angelina back on and allow to reboot.

You have now completed the replacement of the wall bracket.

Contacting Technical Support

If you need help or have questions about this guide, call the TouchTunes 24/7 Service Hotline at 888-338-5853.

To help us assist you more effectively with problem reports, the following information may be required when contacting TouchTunes Support:

- Jukebox model and ID
- Operator ID
- Serial number of the component you believe to be defective
- Date/time of the problem
- Actions performed immediately before the problem occurred
- Any additional comments that are relevant to the problem

The Octave Music Group, Inc.
7250 Mile End, Suite 202
Montreal, Quebec,
Canada, H2R 3A4

The Octave Music Group, Inc.
850 Third Ave, 15th Floor
New York, NY 10022
USA

Technical Support
888-338-5853
www.touchtunes.com

Copyright © 2018 The Octave Music Group, Inc. (formerly known as TouchTunes Interactive Networks, Inc.)